



STEP 1


PRE-DRILL [9/64"] INSTALL HOLES ON TOP RAIL.

ONCE PANELS HAVE BEEN ADJUSTED VERIFY CLEARANCE AND SPACING FOR BOTH FRAME + HANDLE HARDWARE. MOCKUP BOTH MAGNETS PRIOR TO DRILLING.

UTILIZE DIMENSIONS BELOW AS REFERENCE.

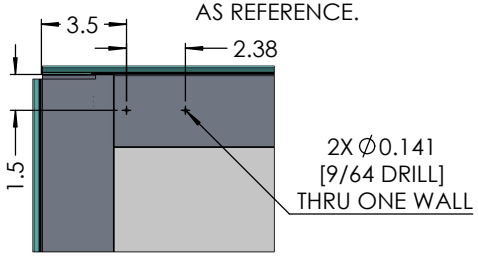

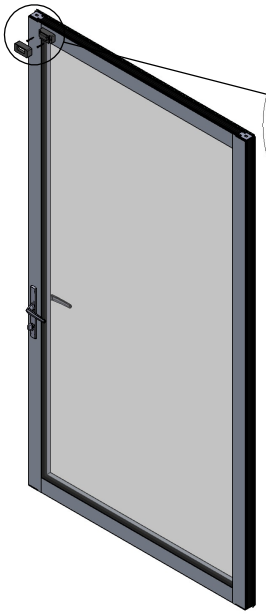

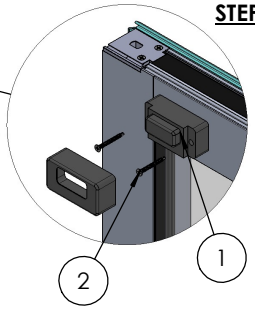


STEP 2

USE 2X #8 X 1.5" PHFH SELF DRILLING FASTENERS TO INSTALL MAGNET ONTO TOP RAIL.


SNAP COVER OVER THE MAIN BASE PLATE.

REPEAT STEPS FOR SECOND PANEL.

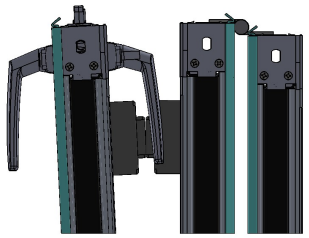

PANELS OPENED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	HW-BF-DOOR-CATCH-XXX	MAGNETIC DOOR CATCH (PAIR)	1
2	FS-N8-PFT-SS-24	#8 X 1.5" PHFH SS SELF DRILLING SCREW	4

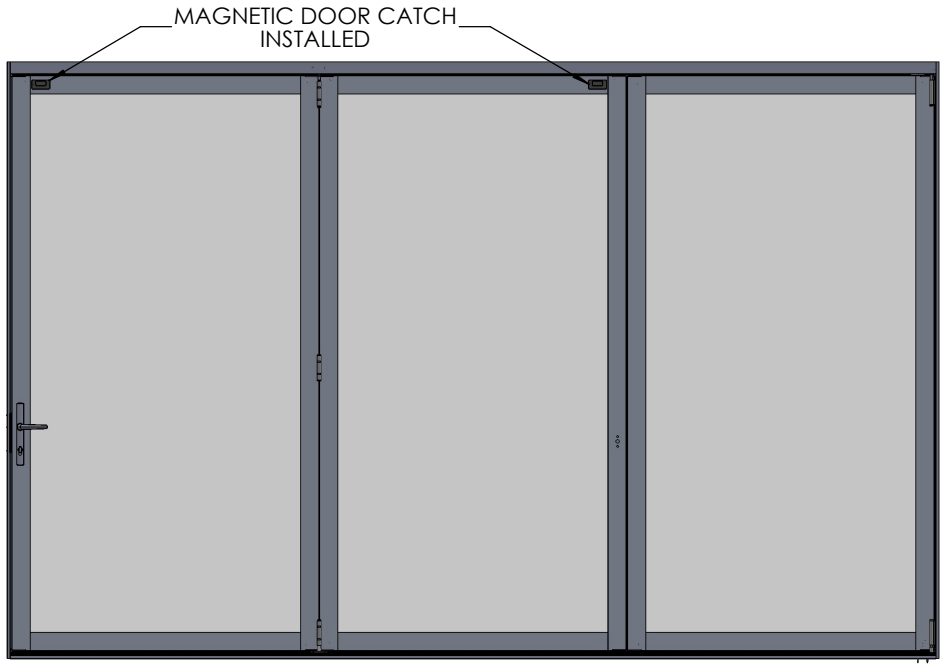

3L INSWING
INTERIOR ELEVATOIN

RAM WINDOWS & DOORS

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	MAGNETIC CATCH INSTALLATION
DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL±1/8 ANGLES± 1 DEG ONE PLACE DECIMAL ±0.2 TWO PLACE DECIMAL ±0.06 THREE PLACE DECIMAL ±0.010	DRAWN	BE	8/11/2026	
	ENG APPR.			TITLE:
	CONFIGURATION 3L - INSWING			S3200 - Bifold - 3L - Inswing - Complete Unit Assembly - 150 x 96
	MATERIAL			SIZE B / DWG. NO. 50000131 / REV 0
	FINISH			SCALE: 1:20 / SHEET 1 OF 3

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF RAM WINDOWS & DOORS. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF RAM WINDOWS & DOORS IS PROHIBITED.